

INSTRUCTIONS FOR PROTECTING THE CHANNELS

Press "**Menu**", and then go on "**Settings**" and press "**OK**" Button.

In the next screen go on "**Protection of minors**" and press "**OK**" Button.

In the next screen the first option is "**Pin inquiry mode**" You need to choose "**Once**".

When you do that, a screen should appear saying: "**You should change the factory made PIN for safety reasons**", you have to press "**OK**" Button.

Then another screen will show up asking for the new pin, which should be "**0000**" and then go on "**Enter new PIN**", you have to choose a 4 digits number and enter again on "**Repeat new PIN**"

Once you have done that, you will come back to the last screen, and you now need to go on "**Select TV programs**" and a list of your channels will show up.

You need to **choose the channels** that you want to protect pressing the yellow button and a little lock will appear next to the channel. When you finish choosing the channels, you need to press "**EXIT**" until you exit the menu completely.

Then if you want to see the protected channels, it will ask you for the pin. If you enter it, the digibox will not ask you for the password again until you switch the digibox off and back on again.